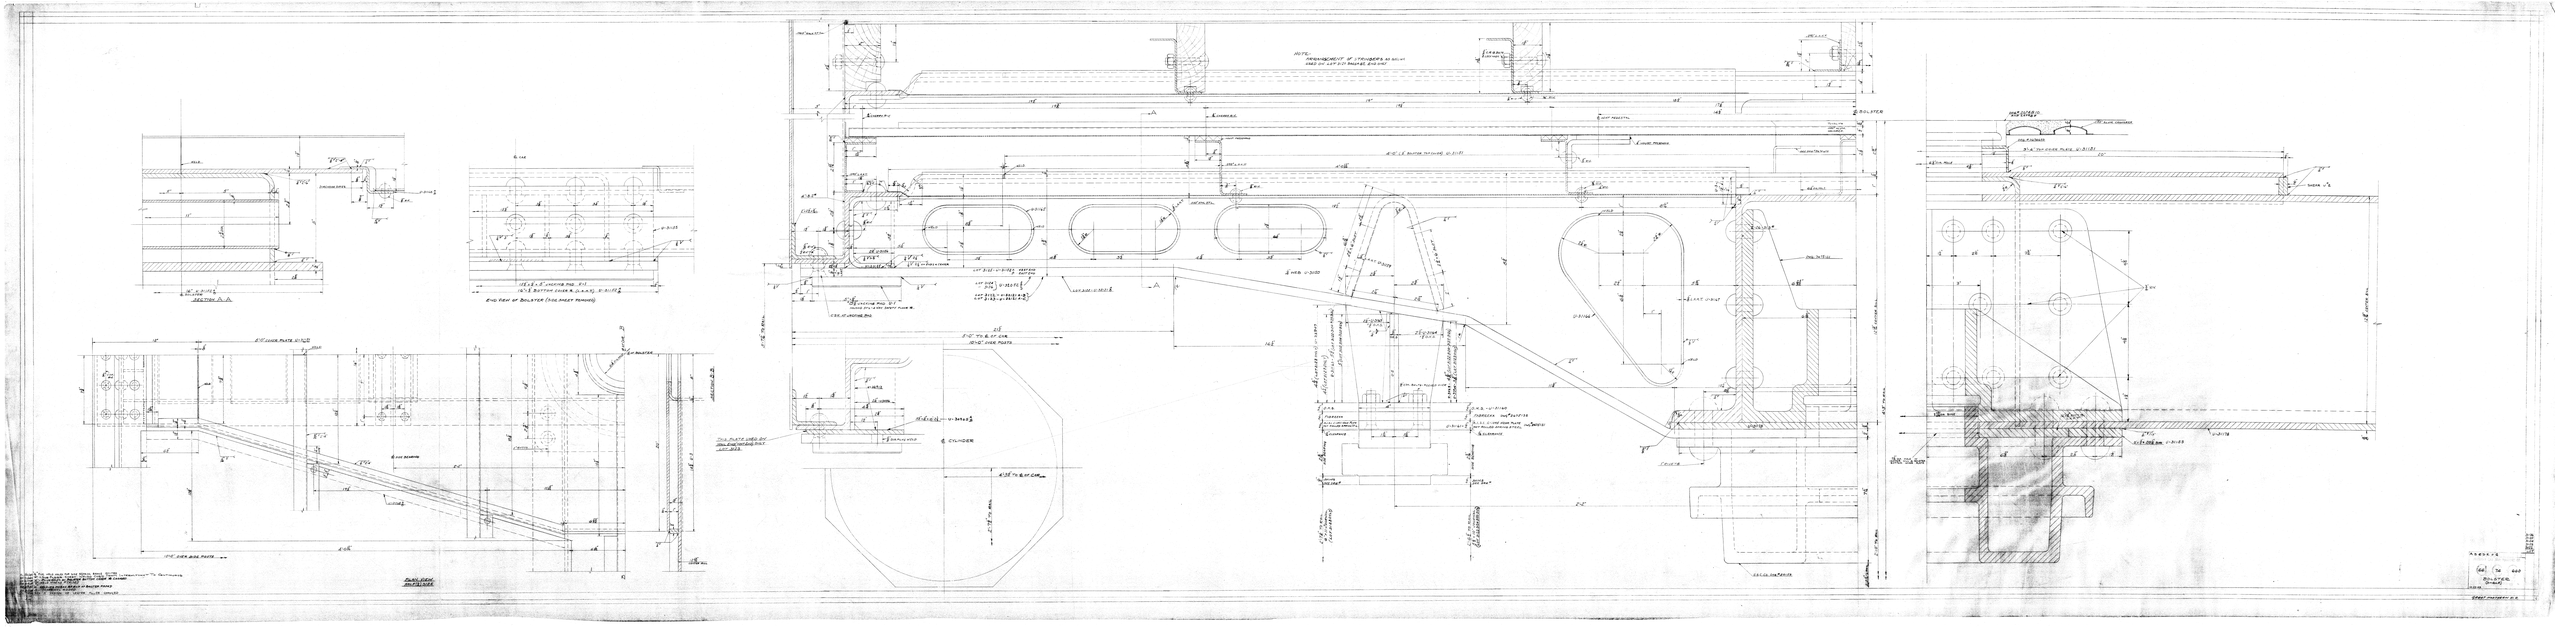
SECTION A-A
END VIEW OF BOLSTER (FOR INNER PENDANT)
BOLSTER
CYLINDER
SECTION B-B